

PARTS MANUAL

T4550-QB



Front-End Loader

M13011


Printed 2013, 05, 29

Table of Contents

(T4550-QB)

Boom Assembly -----	2
Coupler Assembly -----	4
Mounting Kits Assembly -----	6
Bucket Assembly -----	8
Cylinder -----	10
Hydraulic Parts -----	12
Decal & Manual -----	14

BOOM ASSEMBLY

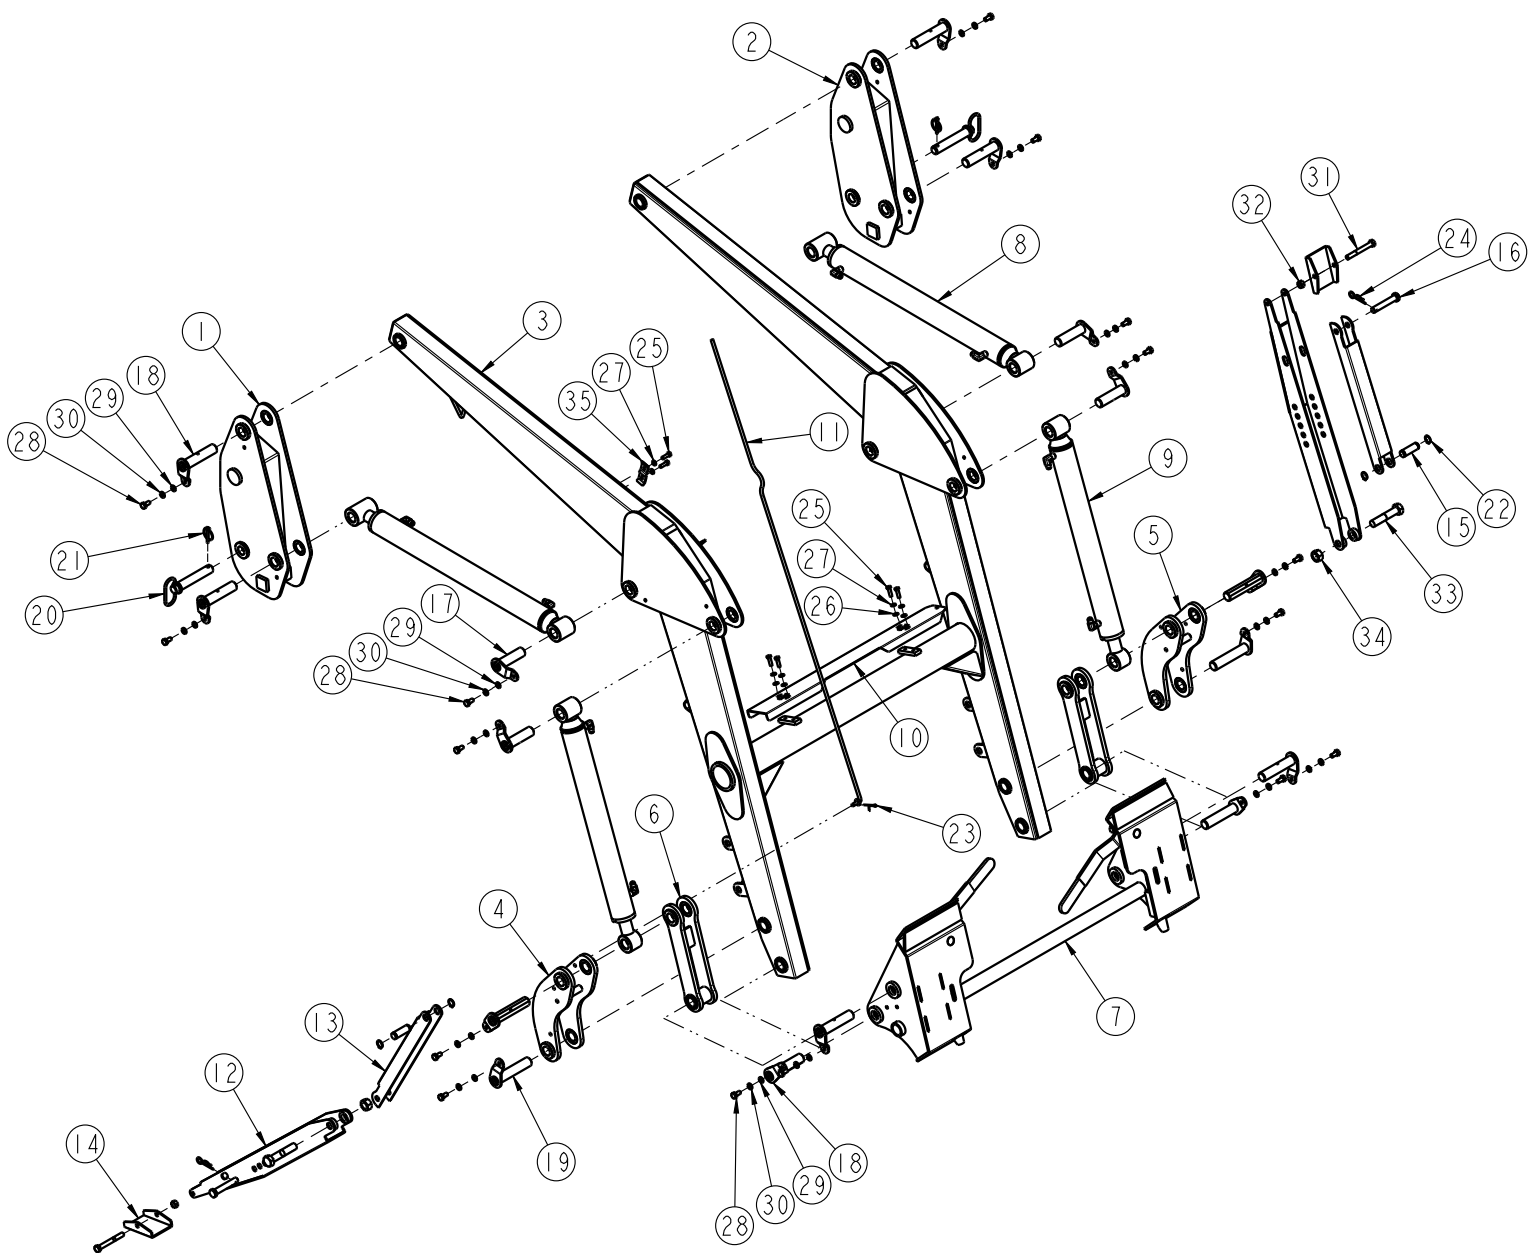


BOOM ASSEMBLY

(P/N: 2150B)

NO.	PART NUMBER	PART NAME	DESCRIPTION	Q'TY	REMARK
1	2150B-3100	COLUMN, RH		1	
2	2150B-3200	COLUMN, LH		1	
3	2150B-0000	BOOM		1	
4	2150C-6000	BUCKET LINK RH.		1	
5	2150C-7000	BUCKET LINK LH.		1	
6	2150B-4100	ROD BUCKET		2	
7	B1000B-000B	COUPLER B/C		1	
8	2150A-8000	CYLINDER BOOM	Ø60xØ35xST515x830L	2	
9	2150B-9000	CYLINDER BUCKET	Ø60xØ35xST455x750L	2	
10	5570C-7010	COVER	2.3†	1	
11	S5570A-4500	INDICATOR ASSY		1	
12	S7085A-8100	STAND		2	
13	S7085A-8200	LINK-STD	4†	2	
14	S7085A-8400	SUPPORTER	4†	2	
15	S7085A-8520	PIN	Ø20	2	
16	S7085A-8530	PIN	Ø16x100L	2	
17	P28A-100A	PIN		4	
18	P28A-125A	PIN	Ø28	8	
19	P28A-135B	PIN		4	
20	P25C-1230	PIN-LEVER	Ø25	2	
21	AL20-98-9990	LINK PIN		2	
22	SN20M	SNAP RING	Ø20	4	
23	PD03025	COTTER PIN	Ø3x25L	1	
24	PR30045	R-PIN	Ø3	2	
25	BH0855125Z	BOLT	M8x25L	6	
26	WP08M	PLAIN WASHER	M8	4	
27	WS08M	SPRING WASHER	M8	6	
28	BH1044150Z	BOLT(10.9T)	M10x20L	16	
29	WP10M	PLAIN WASHER	M10	16	
30	WS10M	SPRING WASHER	M10	16	
31	BH12K7175Z	BOLT(10.9T)	M12x100L	2	
32	NL12175Z	LOCK NUT	M12	2	
33	BH20K5250X	BOLT(10.9T)	M20x100L	2	
34	NL20250Z	LOCK NUT	M20	2	
35	ALN47-07-3100	COVER	4†	1	

COUPLER ASSEMBLY

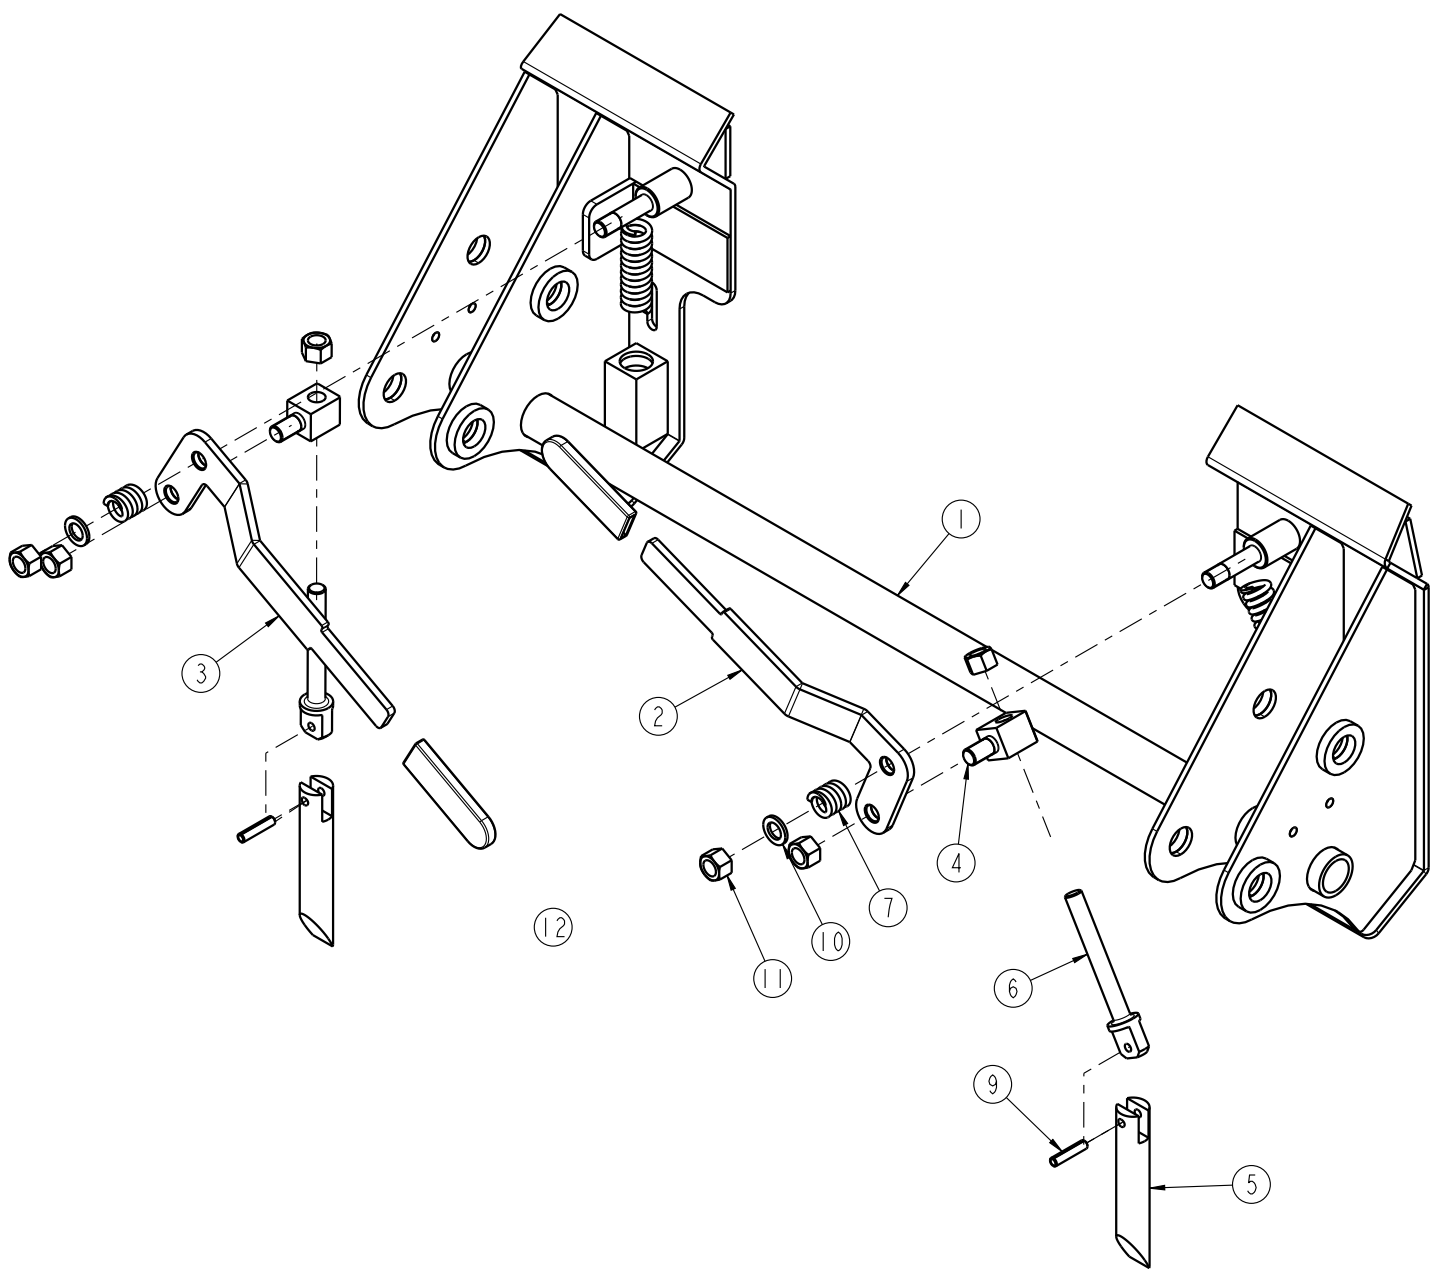


COUPLER ASSEMBLY

(P/N: B1000B-000B)

NO.	PART NUMBER	PART NAME	DESCRIPTION	Q'TY	REMARK
1	B1000B-200E	COUPLER B/C		1	
2	B0945A-111B	LEVER RH.	8†	1	
3	B0945A-112B	LEVER LH.	8†	1	
4	B0945A-1210	PIN	30x30	2	
5	B0945A-1220	PIN	Ø 30	2	
6	B0945A-1230	PIN	Ø 30	2	
7	B0945A-1310	SPRING	Ø 5	2	
8	B0945A-132A	SPRING		2	
9	PS08040	SPRING PIN	Ø 8x40L	2	
10	WPI6M	PLAIN WASHER	M16	2	
11	NLI6200Z	LOCK NUT	M16	6	
12	B0945A-0090	HANDLE		2	

MOUNTING KIT ASSY

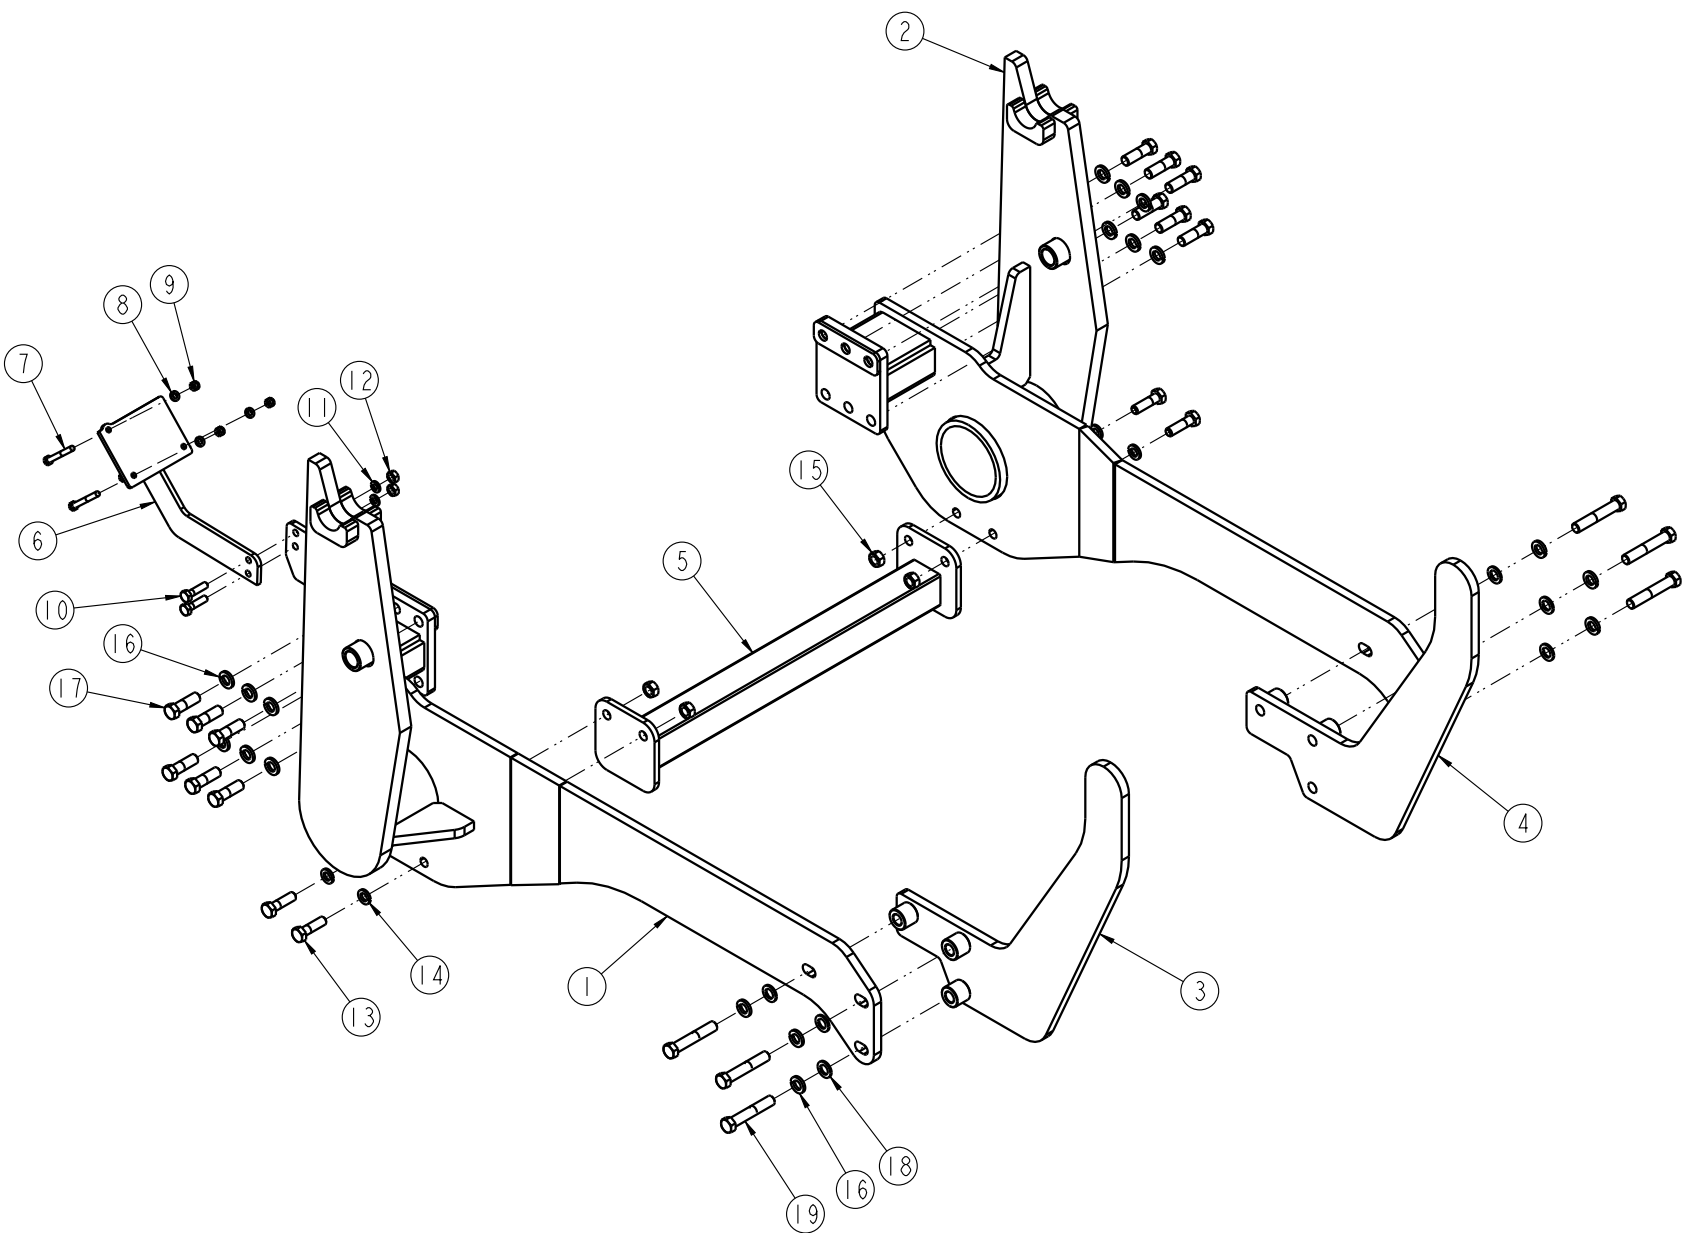


TT50A

TT50A.00-D01

MOUNTING KIT
(P/N: TT50A)

NO.	PART NUMBER	PART NAME	DESCRIPTION	Q'TY	REMARK
1	TT50A-1100	SUB FRAME, RH.		1	
2	TT50A-1200	SUB FRAME, LH.		1	
3	TT50A-4100	BUMPER, RH.		1	
4	TT50A-4200	BUMPER, LH.		1	
5	TT50A-6100	UNDER BAR		1	
6	L2800B-8100	BRACKET-C/V		1	
7	BH08E6125Z	BOLT	M8x70L	3	
8	WS08M	SPRING WASHER	M8	3	
9	NH08125Z	NUT	M8	3	
10	BH1086150Z	BOLT(10.9T)	M10x40L	2	
11	WS10M	SPRING WASHER	M10	2	
12	NH10150Z	NUT	M10	2	
13	BH14A7200Z	BOLT(10.9T)	M14x50L	4	
14	WS14M	SPRING WASHER	M14	4	
15	NH14200Z	NUT	M14	4	
16	WS16M	SPRING WASHER	M16	18	
17	BH16A6150Z	BOLT(10.9T)	M16x50Lx1.5P	12	
18	WP16M	PLAIN WASHER	M16	6	
19	BH1618150Z	BOLT(10.9T)	M16x90Lx1.5P	6	

BUCKET ASSEMBLY

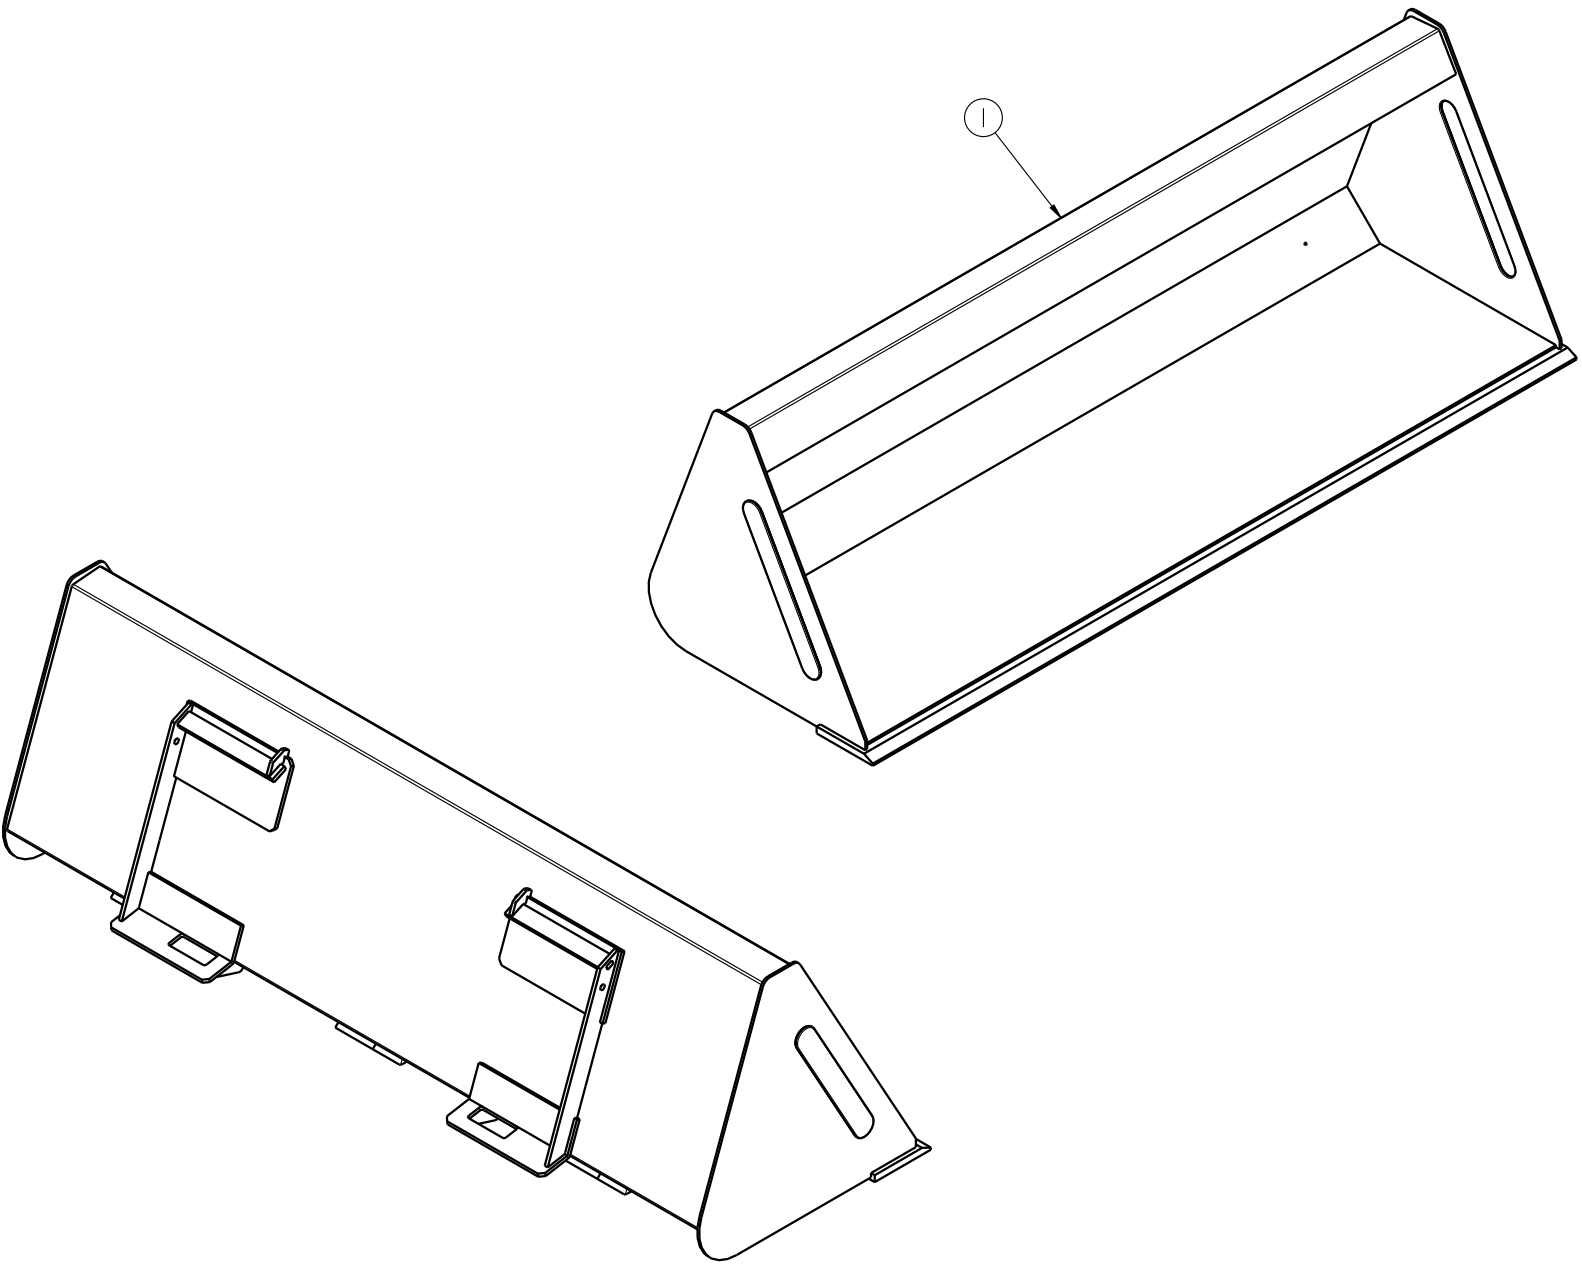


LP58-02-0000

BK005.00-D01

BUCKET ASSEMBLY
(P/N: LP58-02-0000)

NO.	PART NUMBER	PART NAME	DESCRIPTION	Q'TY	REMARK
I	LP58-02-0000	BUCKET ASSY	L=1880	I	

CYLINDER ASSEMBLY

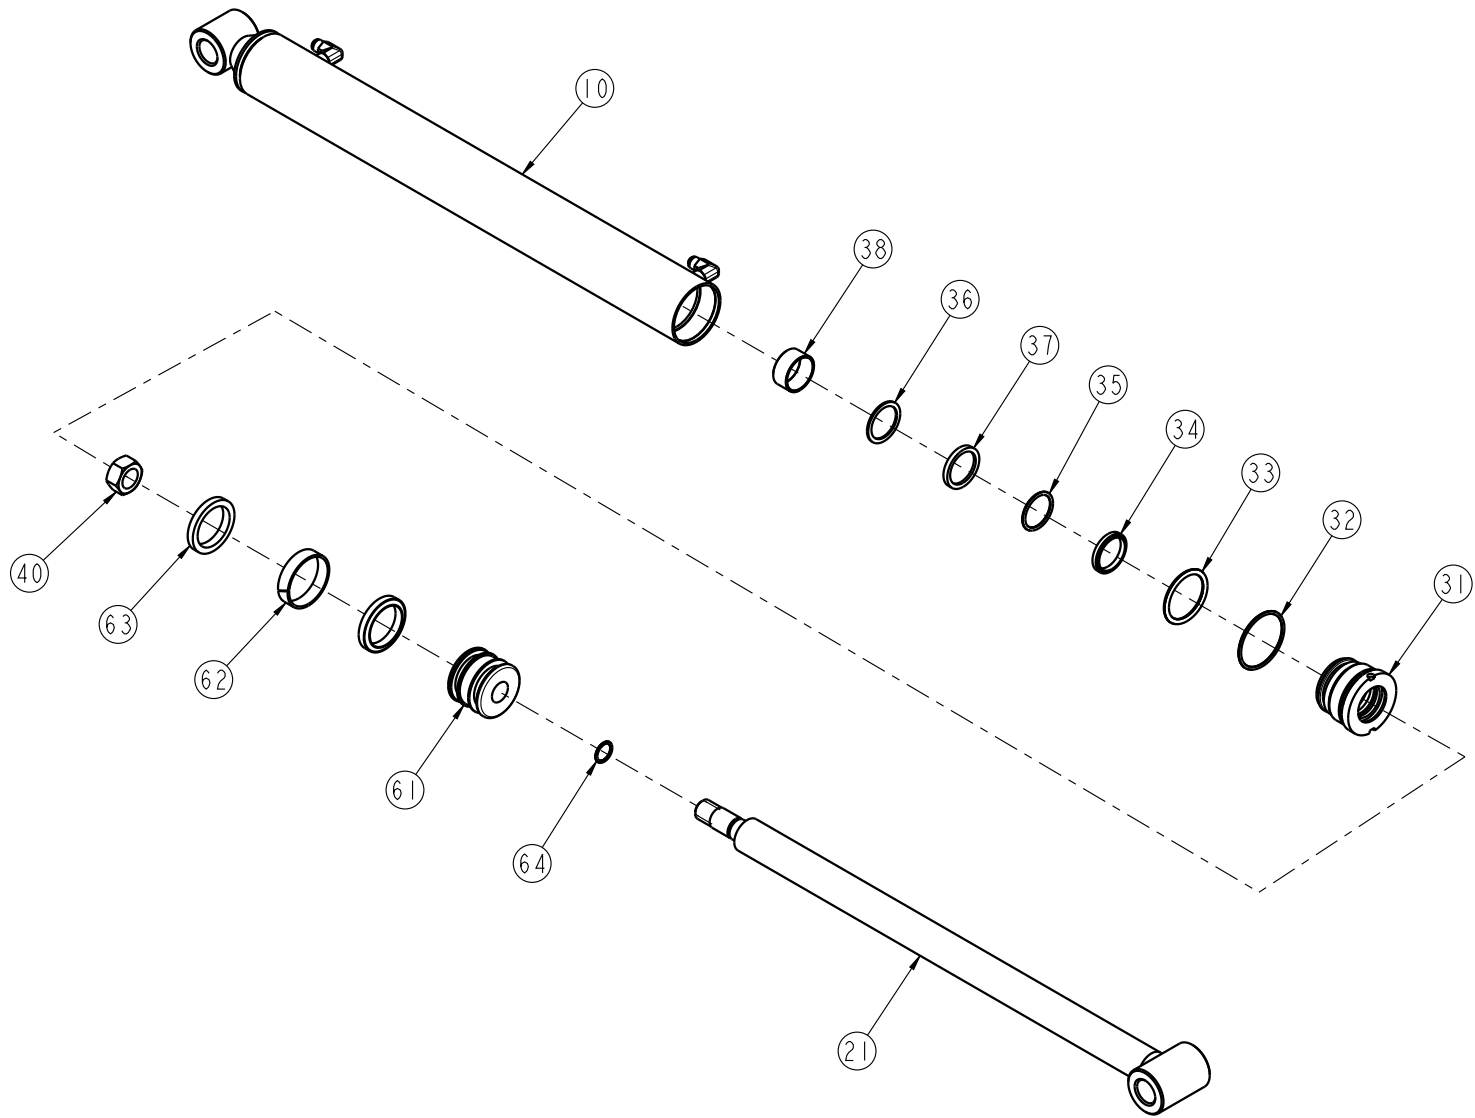


CYLINDER ASSEMBLY

NO.	PART NAME	PART NUMBER		Q'TY	REMARK
		BUCKET (2150B-9000)	BOOM (2150A-8000)		
10	TUBE	2150B-05-1210	2150A-05-2210	1	
21	ROD	2150B-05-1010	2150A-05-2110	1	
31	COVER ROD	CR6035	CR6035	1	
32	O-RING	1BG60	1BG60	1	
33	O-RING	1BP50	1BP50	1	
34	DUST SEAL	LBI 35x43x5/6.5	LBI 35x43x5/6.5	1	
35	O-RING	1BP30	1BP30	1	
36	BACK UP RING	BRT3 35x45x2	BRT3 35x45x2	1	
37	U-PACKING	ISI 35x45x6	ISI 35x45x6	1	
38	DU BUSH	DU3520	DU3520	1	
40	NUT	CY-M20	CY-M20	1	
61	PISTON	PI6035-W	PI6035-W	1	
62	WEAR-RING	WRW 60x55x15	WRW 60x55x15	1	
63	U-PACKING	ODI 60x45x9	ODI 60x45x9	2	
64	O-RING	1BP21	1BP21	1	
	SEAL KIT (Include 32,33,34,35 36,37,63,64)	SEAL 6035	SEAL 6035		

2150B

2150B.00-CY-T01


HYDRAULIC PARTS

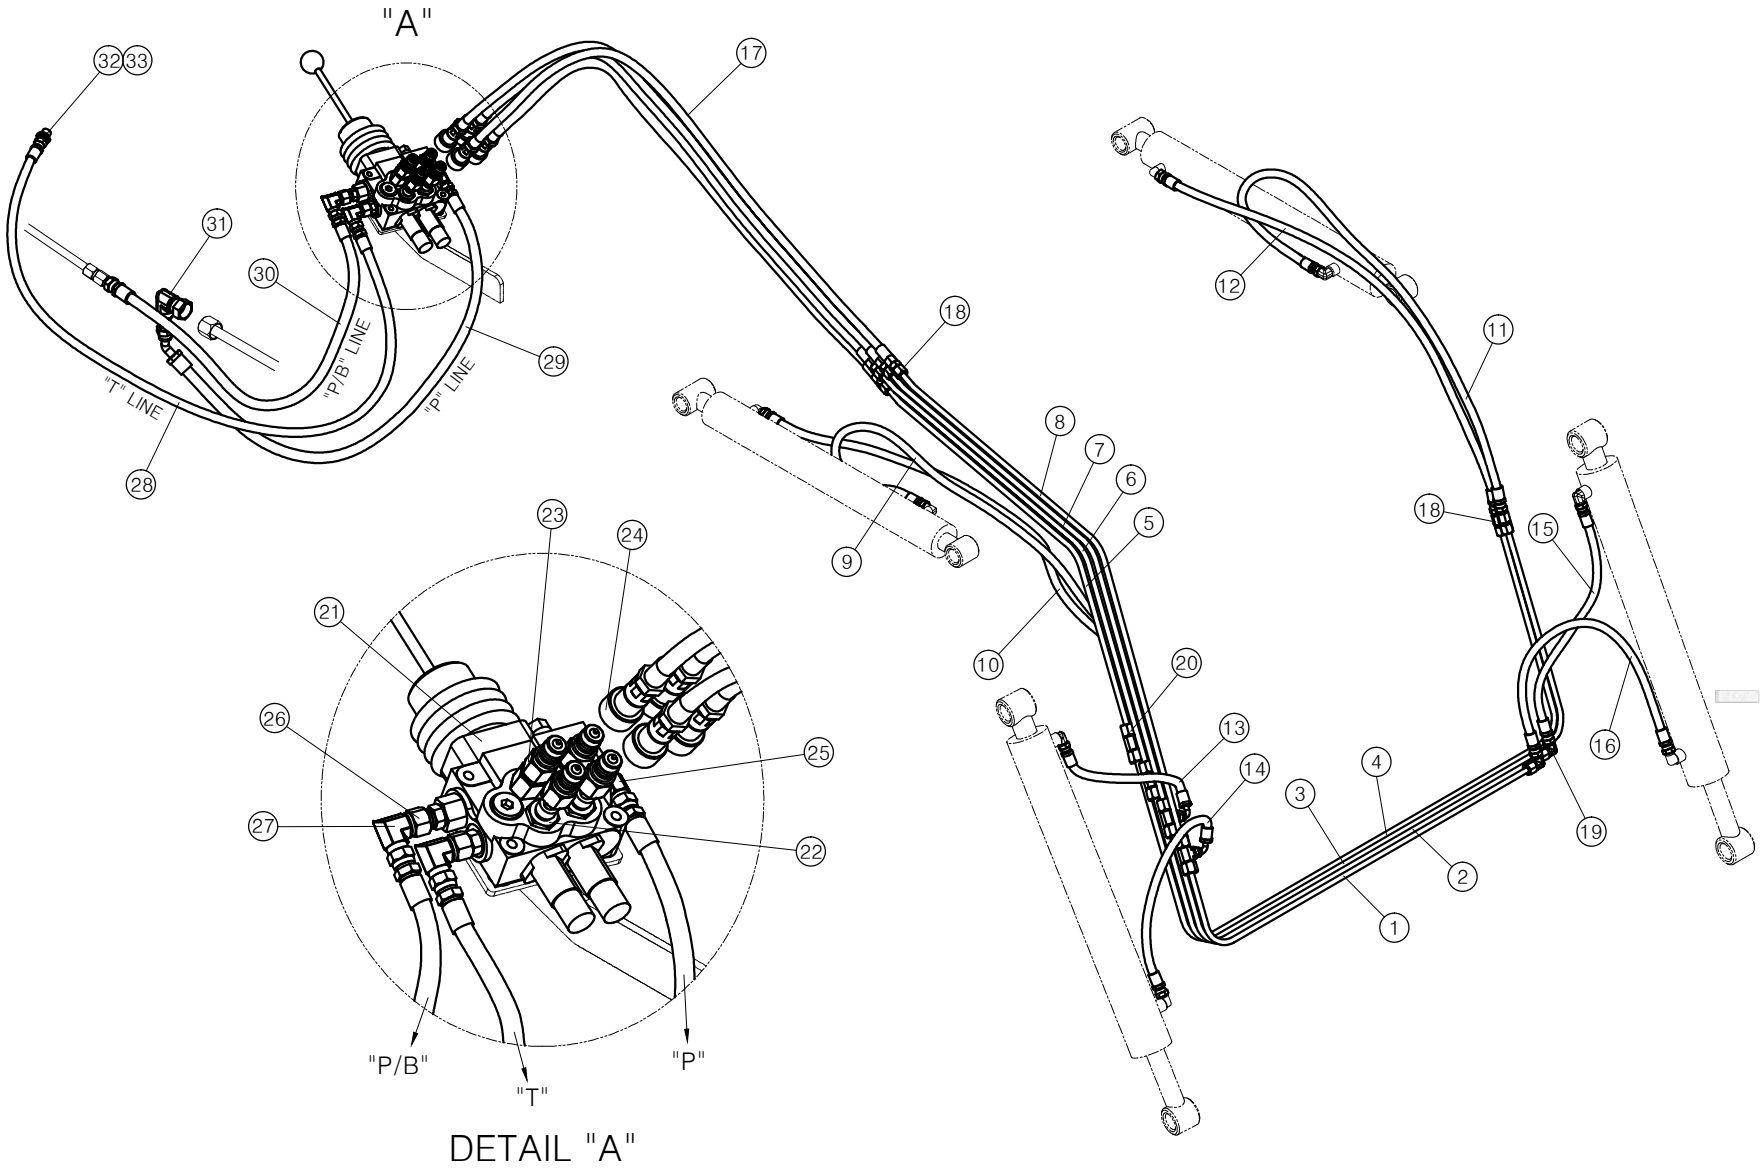

HYDRAULIC PARTS

NO.	PART NAME	PART NUMBER	Q'TY	REMARK
1	PIPE	2150B-07-1100	1	
2	PIPE	2150B-07-1200	1	
3	PIPE	2150B-07-1300	1	
4	PIPE	2150B-07-1400	1	
5	PIPE	2150B-07-1500	1	
6	PIPE	2150B-07-1600	1	
7	PIPE	2150B-07-1700	1	
8	PIPE	2150B-07-1800	1	
9	HOSE ASS'Y	5PG1-0240	1	
10	HOSE ASS'Y	5PG1-0850	1	
11	HOSE ASS'Y	5PG1-0460	1	
12	HOSE ASS'Y	5PG1-0960	1	
13	HOSE ASS'Y	5PG1-0830	1	
14	HOSE ASS'Y	5PG1-0360	1	
15	HOSE ASS'Y	5PG1-0730	1	
16	HOSE ASS'Y	5PG1-0560	1	
17	HOSE ASS'Y	3P81-1290	4	
18	NIPPLE	ALK28-07-9800	6	
19	ELBOW NIPPLE	ALK28-07-9600	2	
20	TEE NIPPLE	ALK28-07-9900	4	
21	CONTROL VALVE	HDM03/2	1	BESKO VALVE
22	O-Ring NIPPLE	AL25-07-940B	4	
23	Q-COUPLER(M)	ALK28-07-720A	4	
24	Q-COUPLER(F)	ALK28-07-710A	4	
25	ELBOW NIPPLE	ALK28-07-781B	1	
26	O-Ring NIPPLE	7860-07-7080	2	
27	SWLVEL ELBOW NIPPLE	S1600G-07-0010	2	
28	HOSE ASS'Y	1P21-0050	1	
29	HOSE ASS'Y	1P21-0110	1	
30	HOSE ASS'Y	1P21-0120	1	
31	ELBOW NIPPLE	7860-07-7050	1	
32	NIPPLE	7860-07-7040	1	
33	WASHER	7860-07-7041	2	

DECAL & MANUAL

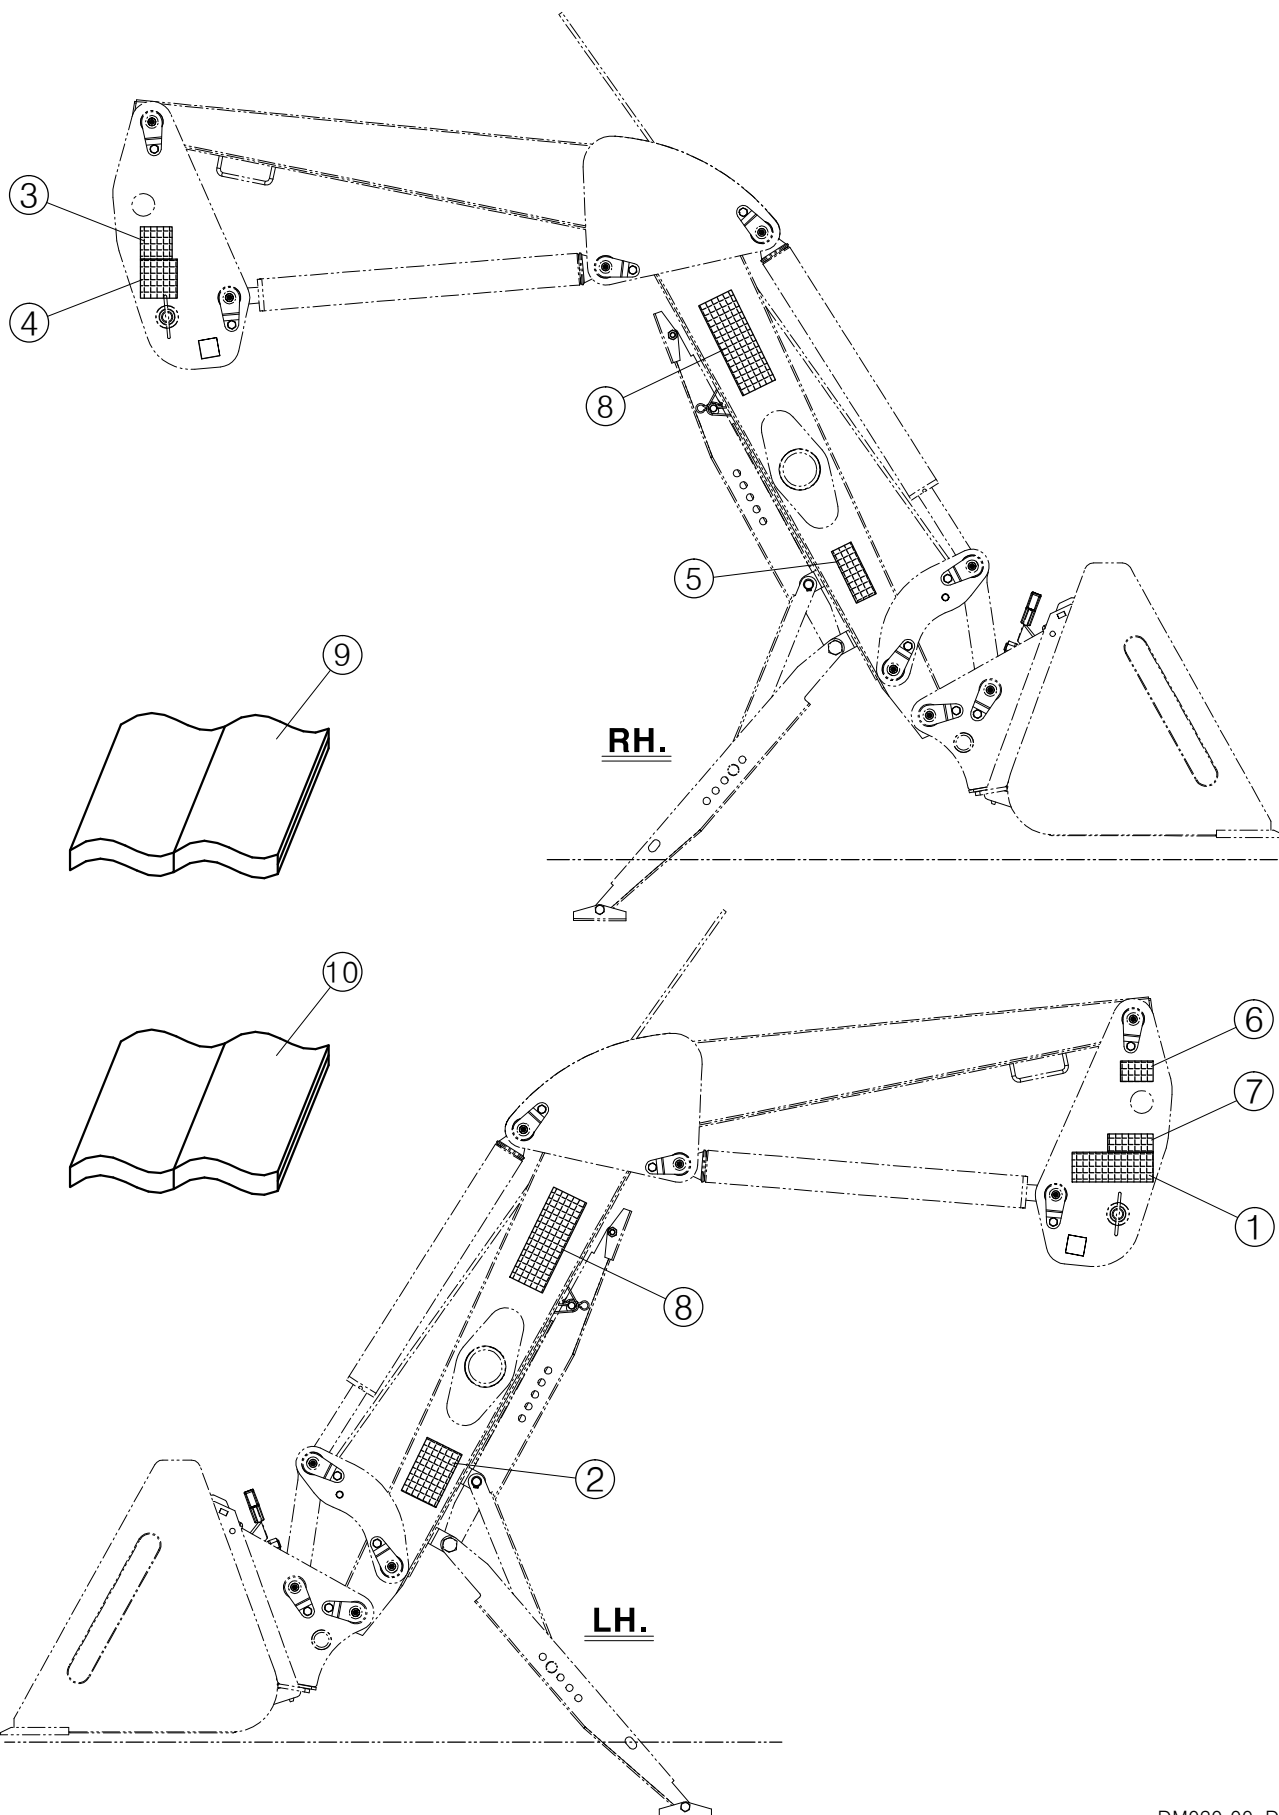

DECAL & MANUAL

NO.	PART NAME	PART NUMBER	Q'TY	REMARK
1	DECAL	03L01	1	
2	DECAL	03L02	1	
3	DECAL	03L03	1	
4	DECAL	03L04	1	
5	DECAL	03L05	1	
6	DECAL	03L06	1	
7	DECAL	03L00	1	
8	DECAL	13L05	2	"T4550"
9	OPERATOR'S MANUAL	M03L01	1	
10	PARTS MANUAL	M13011	1	